

A microwavable, reusable bed warmer!

湯たロン

Yutaron



For 8 hours

Long use. A constant temperature is maintained for 8 hours.

Just warm it by microwave.

A pleasant warmth remains until morning.

Yutaron is a convenient, easy-to-use bed/foot warmer.

It takes just 4 minutes to warm Yutaron (in a 600W microwave).

(See the table for warming.) Reuse Yutaron again and again.

Our original technology has made it possible to maintain a constant temperature (about 42 °C) for 8 hours.

Put Yutaron near your feet before you go to sleep, and it'll keep you warm until morning.

Yutaron's pleasant natural warmth helps you sleep soundly.



The degassed packaging makes it safer.


The bags of competing products can include 4% to 6% air, which enters during filling.

There have been cases of such air-containing bags bursting when the air in the bag was warmed in the microwave. Yutaron is the only microwavable bed warmer with air-free, double-layered bags.

The design makes Yutaron very safe.

Constant temperature for many hours!

At room temperature, material inside Yutaron is solid, but when it's warmed in the microwave, it liquefies. The material stays at a constant temperature for many hours. When resolidifying, it releases 73 times as much heat as the same volume of water. You can count on finding cozy warmth at your feet when you wake up. It's totally different from conventional hot water bottles.

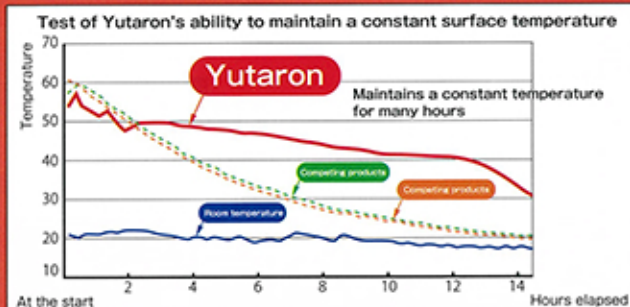

It's safe, because won't get too hot.

After the specified heating duration, about 80% of the material inside Yutaron has liquefied, and after that the rest of the material melts from the internal heat.

It will only reach 100 °C if you keep heating it after all the material had liquefied.

The transparent bag allows you to visually check how much of the material has liquefied.


(Don't remove the outer bag.)

Yutaron has excellent heat conductivity, which shortens the required heating time.




Warm Yutaron simply by using a microwave! Put Yutaron near your feet before going to sleep! The cozy warmth remains until morning!

1

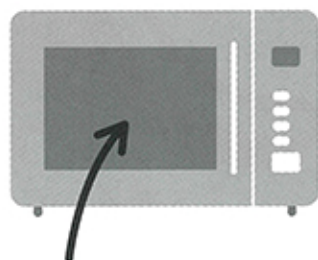


Put Yutaron in the microwave.

2

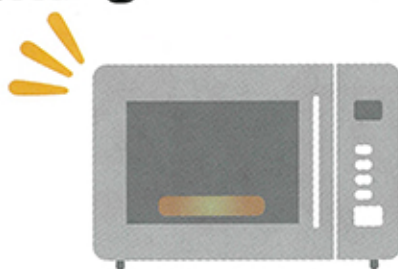

Heat it for the specified time. (See the table below.)
Avoid tearing the bag.

3

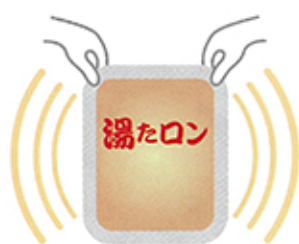

Remove Yutaron from the microwave by
holding the top corners of the rim.
The bag is hot. Take care to avoid burning yourself.

4



Put it in the special cover for Yutaron.

For the proper heating duration, please check the table below. Microwave ovens have different wattages.

Heating duration	600W or lower	700 (800) W	900 (1000) W
Heat it at the setting for cooking. Strictly observe the heating duration. Stop heating it before all the material has liquefied.	About 4 min.	About 3 min. 30 sec.	About 3 min.

Use instructions

Double bags are used for this product. Do not remove the outer bag.

○Instructions for heating

- Stop heating it when 80% to 90% of the material has liquefied.
- When heating is finished, put Yutaron in its special cover. The residual heat will gradually spread, causing the opaque parts to become transparent.
- Stop heating it before all the material has become transparent.
- Do not use auto heating or any other automatic settings.
- If the bag should start to swell, stop heating it immediately.
- Remove Yutaron from the microwave by holding the top corners of the rim. The bag is hot. Holding it other than by the corners may cause burns.
- If the material in the bag should spill in the microwave, wait until the material cools and solidifies before touching it.
- It stays hot for about an hour after heating. Handle it carefully.

○Use instructions

- Be sure to use the special cover for Yutaron. Placing the bag directly on the skin may cause burns.
- Be careful to avoid low-temperature burns.
- Special care is necessary for people with blood circulation disorders, including diabetes, who may not feel the heat that may cause burns.
- When infants or disabled persons use the product, their guardian or helper needs to pay particularly close attention.
- Don't drop or strike the product.
- This product is not for cold storage. Don't refrigerate or freeze it.
- Use the product only as specified.
- When not in use, the product should be kept away from heat and light.
- When discarding, sort the product as plastic waste.

Related Product

■A long-use product, it remains in liquid state at the constant temperature of 42 °C for 3 hours.

Feeling cold? Leave it in your pocket!

Pocket Yutaron: Microwavable warming pad (heat for 1 min. 30 sec. at 600W)

■Manufacturer and distributor:

Ice Japan Co., Ltd.

Nakajima-cho 4-9-28, Muroran,

Hokkaido 050-0074

Tel.: 0143-44-5675 Fax: 0143-43-3120